Undersink Water Purifier User manual













Accessories


Please check the accessories before use. Please contact your local dealers for any missing accessories

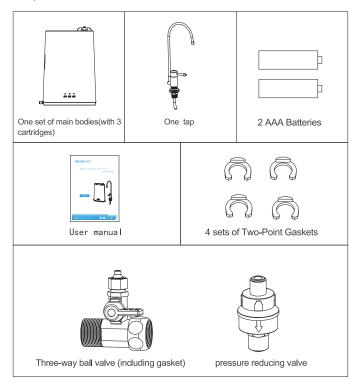

Components

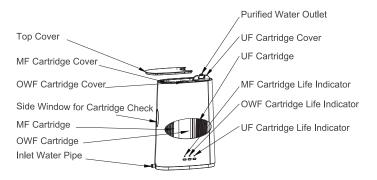

General Setup

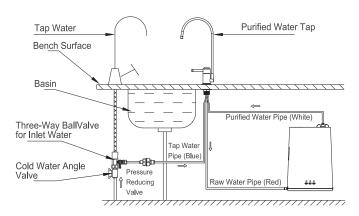

Control Panel




Cartridge life indicator:

Press the button to activate the green indicator of cartridge life and hold for 5 seconds. If any of the cartridges are depleted, the corresponding indicators will turn red.

Reset cartridge life indicator:

After replacing cartridges, please press the corresponding button and hold for 3 seconds to reset the cartridge life indicator (turn it back to green with beeping sound).

NB: Cartridge lives are subject to change in relation to the quality and volume of inlet water.

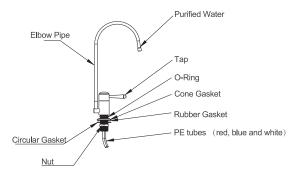

Technical Data

Name: Undersink Water Purifier


Model: U608AU

Min Working Pressure: 100KPa
Min Working Temperature: 4°C
Min Water Intake Temperature: 5°C

Flow: 1.5L/min

Product Type: OW-UF-07
Water Supply: Tap Water
Max Working Pressure: 700KPa
Max Working Temperature: 40°C
Max Water Intake Temperature: 38°C

Functions

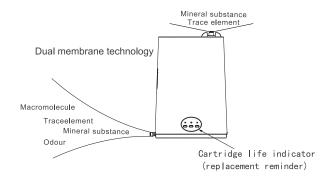

- X Before use, please read the following information carefully.
- X Please contact our technicians for any problems.

Please do not leave the machine in subzero environments as this may cause irreparable damage.

Please do not leave the machine in high temperature environments as this may result in deformation, breakdown and leakage.

Every day, before use, please flush water through the tap for at least 10 seconds.

If the machine is idle for more than 2 days, please flush water through the tap for at least 20 seconds before use.

Hot water (>40°C) is not acceptable. High temperature water may result in deformation, breakdown and leakage of the machine.

When the flow rate of purified water decreases, please wash the surface of the MF and UF cartridges.

ORIGINWATER GROUP PTY LTD ACN 627 690 055 1508 Level 15 World Tower, 87 Liverpool St, Sydney, Australia